

| Computer | Model | Key Command to Activate/Deactivate Port |
|------------------|--|---|
| Acer | Note 350, 750, 760, 780, 950 | Ctrl-Alt-ESC while computer boots activates the setup menu; system config; advanced sys config; display device; LCD/CRT |
| | Note 971 | FN + F5 |
| AST | Ascentia, Ascentia A Series, PowerExec, 9xxN | FN + F5 |
| | Ascentia J Series | FN + F3 |
| | Ascentia P Series, Bravo, 800N, B5N | FN + F12 |
| | Premium Exec | FN + D |
| Altima | All | Shift-Ctrl-Alt-C |
| Ambra | All | Ctrl-Alt-Esc for set-up screen FN + F2 FN + F5 |
| Amrel | All | Set-up screen Shift-Ctrl-D |
| AMS | Power CD | FN + F2 |
| AMT | NP-743D | Set-up (Advanced) Screen Display Select CRT or LCD. |
| AT&T | 3181, Globalyst 250 | FN + F3 |
| | Globalyst 200, Globalyst 3150 Safari | FN + F6 |
| Austin | All | Ctrl-Alt-Comma FN + F12 |
| Award | Modular Notebook | FN + F6 |
| Bondwell | All | reboot for LCD or CRT options to appear |
| Canon | BTO | FN + F6 |
| | Innova 386NX | Setup Menu Option |
| | Innova Book 360CD, 490CDS | FN + F7 |
| | NoteJet 3CX | Change CMOS to CRT |
| Chaplet | All | Select from set-up screen FN + F6 FN + F4 |
| Chembook | All | FN + F6 |
| Chicony | All | Ctrl-Alt-Esc Automatic |
| Commax | All | Ctrl-alt-#6 FN + F7 FN + F6 |
| Compaq | Armada, LTE, Contura | FN + F4 |
| | Presario | FN + F2 |
| | Other | Automatic, Ctrl-Alt < |
| CompuAdd | NBE 780 | FN + F3 Set-up select Display LCD/CRT |
| | Other | Automatic |
| Compudyne | Laptop | Ctrl-Shift-D or set-up screen |

| | | |
|---|--|---|
| | N386SXE | FN + F8 |
| Data General | All | Ctrl-Alt-Command |
| Data View | All | Ctrl-Shift-M |
| DEC | HiNote | FN + F4 |
| | 425 SL | FN + F5 |
| | Other | Automatic |
| Dell | Latitude, CP-Inspiron | FN + F8 FN + F12 |
| | Other | Ctrl-Alt-< FN + D |
| Dolch | All | Set switch to CRT before boot-up |
| Epson | 650C | Set Switch to CRT |
| | Other | FN + F12 |
| EPS Technologies | L166MMX, MP-975A | FN + F4 |
| Everex | All | Select from set-up screen |
| | Other | FN + F10 |
| Fujitsu | Lifebook | FN + F10 |
| Gateway | Solo, Liberty | FN + F3 |
| | Colorbook | FN + F1 |
| | Colorbook 2 | Option in CMOS setup |
| Grid | All | Ctrl-Alt-Tab FN + F2 |
| Hitachi | M120T/1000, M100D | FN + F7 |
| | E100D/810 | FN + F8 |
| Hyundai | All | Set-up screen option |
| Hewlett Packard | Omnibook | FN + F5 FN + F12 |
| IBM | Thinkpad 310, 36x, 380, 701, 75X, 760, 560, 770 | FN + F7 |
| | Thinkpad 350, PS/Note 425C | FN + F1 for setup |
| | LX40 | Setup LCD to CRT |
| | Thinkpad 700 | Ctrl-Alt-S |
| Infotel | Ultra | FN + F12 |
| Jetbook | All | FN + F6 FN + F12 |
| Kaypro | All | Boot with monitor connected |
| Kris Tech | All | FN + F8 |
| Macintosh See How to set up a Mac PowerBook for more information | PowerBook 3400 | Select Monitor Icon on PowerBook Control Strip, Select Resolution to match display device (e.g. 800x600 Simulscan for simultaneous display on PowerBook and on projector) |
| | PowerBook 1400 | Requires Optional Video Card. Select Monitor Icon on PowerBook Control Strip, Select Resolution to |

| | | |
|----------------------|--|---|
| | | match display device (e.g. 800x600 Simulscan for simultaneous display on PowerBook and on projector) |
| | PowerBook 160, 165, 180, 520, 540, 5300 | Control Panel folder, PowerBook Display folder, Activate Video Mirroring, warm reboot. Or (if display problems occur w/mirroring) Control Panel folder, Monitors, switch primary display by dragging white menu bar to Monitor 2. |
| | PowerBook 140,145,150,170 | No Video Port. Requires 3rd party interface. |
| | Portable 100 | Not Compatible |
| Magitronic | All | FN + F4 |
| Mastersport | All | FN + F2 |
| Micron | Millenia, Transport | FN + F2 FN + F12 |
| Midwest Micro | Elite | FN + F11 |
| Mitsubishi | All | SW2 On Off Off Off to activate SW2 Off On On On to de-activate |
| NCR | All | Set-up screen option |
| NEC | Versa 2000, 4000 series, 5000 series, 6000 series, M, P, V, MX series, Ultralite | FN + F3 |
| | Versa 2400 | FN + F10 |
| | Versa S | FN + F2 |
| | Other | Select "Active" from set-up |
| Packard Bell | All | FN + F10 FN + F2 |
| Panasonic | All | FN + F2 Panasonic set-up program |
| ProStar | 5200, 6200, 12000 | FN + F6 |
| | Other | Ctrl-Alt-S at startup |
| Sager | All | FN + F6 |
| | NP8600 | FN + F9 |
| Sampo | All | CTRL-ALT SHIFT C |
| Samsung | 810 | FN + F4 |
| | 55200 | Set-up screen option |
| | Pro 500 | FN + F5 |
| | Pro 800, Sens 700 | FN + F6 |
| Sanyo | All | Set-up screen option |
| Sharp | All | FN + F5 |
| Sotec | PC3020, PC9000, PC9020 | FN + F5 |
| | Other | FN + F1 |
| Tandy | All | Ctrl-Alt-Insert |

| | | |
|--------------------------|--|---|
| Tangent | All | FN + F5 |
| Texas Instruments | 370, 390, Travelmate 7000, Extensa 36x | FN + F2 FN + F3 |
| | Travelmate 2000 | Switch CRT On |
| | Travelmate LT286/45 | Press SETUP key on keyboard |
| | 3000 | type ALTVID at DOS prompt |
| | 4000 | Ctrl-Alt-Setup |
| | 4000M and 4000E | FN + Setup at DOS prompt - Screen Display = BOTH |
| | 5000 | Ctrl-Alt-Esc |
| | 5100/5200 | Win95 Control Panel, TI SETUP, System Config, Display device, LCD/CRT/both. Win3.1 Travelmate n/b Setup, TI SETUP, System Config, Display device, LCD/CRT/both. |
| | 6020, 6030, 6050, Extensa 600CD, 650CDT | FN + F12 |
| | Extensa 5xx/6xx Series | FN + F10 |
| | Other | FN + F5 |
| Top-Link | All | Set-up screen option FN + F6 |
| Toshiba | 1000, 1200, 1600, 3100E, 3200 | FN + End |
| | 1100 | Ctrl-Alt-End |
| | 1850 | Reboot |
| | T1910 Satellite | Automatic, no simultaneous display |
| | T1950CT, T1960CT | type TSetup at DOS prompt Select display location int/ext/both (internal, external, or both displays) |
| | 105CS, 110CT, 115CS, 200CDS, 400, 410, 415, 420, 430, 500CDT, 610, 650CT 2100CT, 2105CT, 2130CS, 2150CS, 2150CDT, 2150CT, 2400CS, 2400CT, 2450CT, 3600DT, 4500, 4700, 4800, 4850, 4900, Tecra 700CDT, 720CDT, 730CDT | FN + F5 |
| | 3100 | Ctrl-Alt-End |
| | 3100E, 3200 | FN + End |
| | 3100SX, 3200SX | N/A PORT ACTIVE |
| | 3400 | Needs SCSI adapter for ext. video |
| | 4400sx | N/A PORT ACTIVE |
| | 5100 | Ctrl-Alt-End |
| | 5100/100, 5200, 5200/100 | N/A PORT ACTIVE |
| | 610CT | Needs SCSI adapter for ext. video |
| Twinhead | Slimnote 5100T, 9133CX | FN + F5 |
| | Slimnote 8xx Series | FN + F5 |
| US Logic | All | FN + F8 |

| | | |
|----------------|----------------------|------------------------------------|
| Winbook | XP, XP5 | FN + F6 (simul) FN + F10 (int/ext) |
| | XP5 Pro, FX | FN + F12 |
| | XL | FN + F2 |
| | LM | FN + F8 |
| Wyse | All | Software driven |
| Zenith | Z-Noteflex, Z-StarEX | FN + F10 |
| | Z-NoteGT | FN + F7 |
| Zeos | 486 | CTRL-SHIFT D |
| | 486 Meridian | FN + F1 |